



STAR GALAXY

PROFESSIONAL PINBALL

Operating Instructions

**Please keep for future reference
Adult assembly required**

(0616)

The Game

The primary goal of the game is to launch the ball & then earn as many points as possible by hitting bumpers. The game is divided into 3 levels of play. The lowest level offers 9 balls. The medium level offers 6 balls & the highest level offers 3 balls for one complete game. The game also allows two players to compete against each other.


Features

- * Coolest stereo/mono SFX sound effects
- * Electronic AC flippers
- * Special bonus with accumulation score calculation schemes
- * Up to 99 extra lives offered
- * Volume adjustment
- * Two player option
- * Skill level selection


Safety Rules & Advice for Supervising Adults

- The product is not recommended for children under 14 years old. As with all electric products precautions should be observed during handling & use to prevent electric shock. Read & follow these instructions & safety rules & keep them for future reference.
- This product must only be used with the recommended transformer. Do not connect it to more than the recommended number of power supplies.
- Do not use if there is any damage to the power cord, plug or other parts of the transformer.
- Unplug the unit from the power supply if not in use for a long period of time.
- For indoor use only.
- Use a damp cloth or sponge to clean the unit. Disconnect power supply before cleaning. Do not submerge this product into water.

Part List

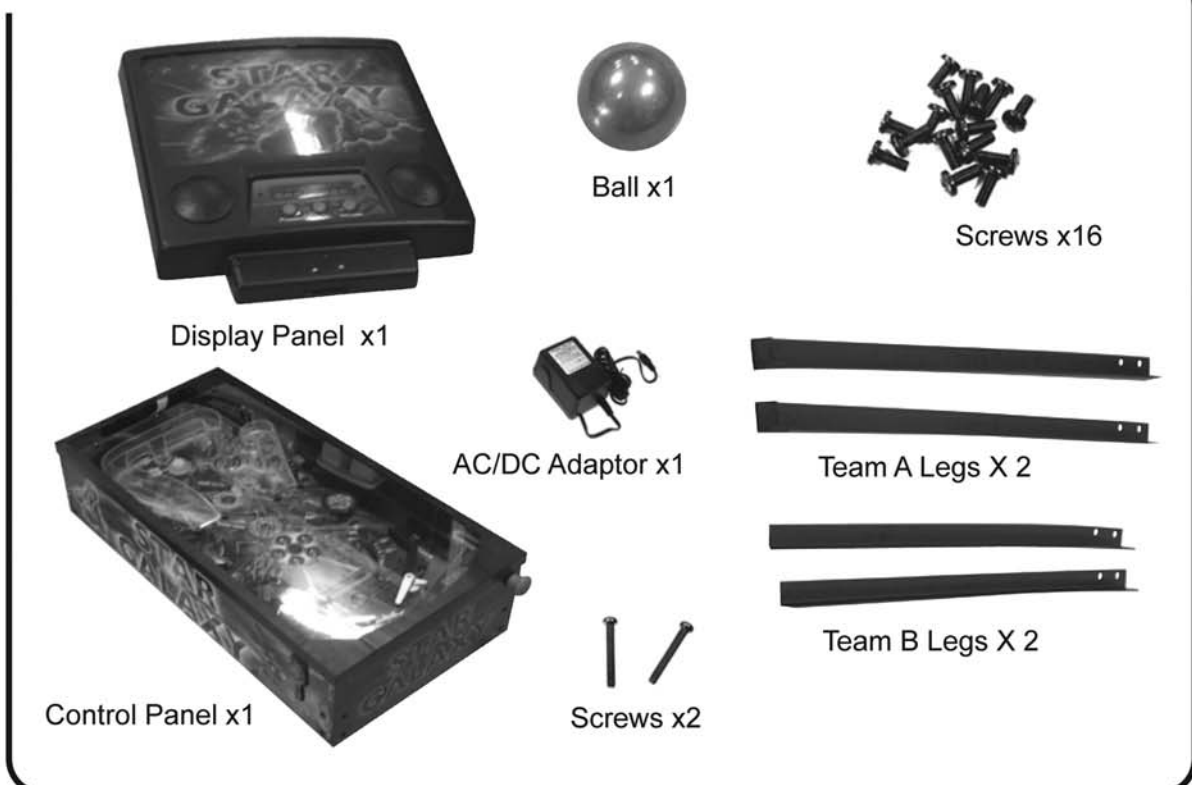

Installation

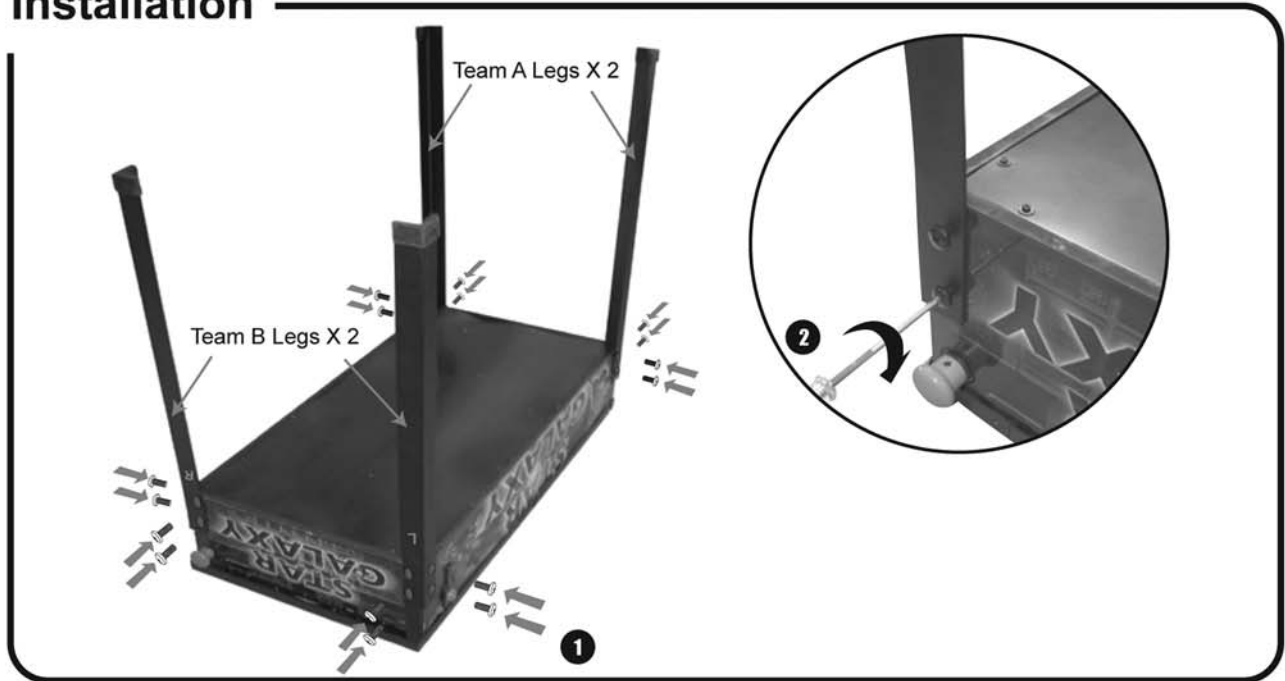

Installation

2

3

4

5


6

7

8

Quick Start

1. Connect the AC / DC adaptor to the wall socket.
 
2. Plug into the adaptor jack at the back of the Playfield.
 
3. Toggle the Main Power Switch from "0" to "1" position.
 
4. Press START/STOP button to play.
 

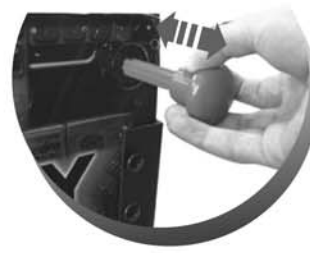

The Game

The game has 9 balls by default although you can change the number of balls for each game by changing the skill level.

Level	Number of balls	Difficulty
0	9	Novice
1	6	Normal
2	3	Champion

The object of the game is to shoot the ball onto the playfield & then use the AC flippers to keep the ball in play as long as possible - thereby achieving as high a score as possible.


A ball is counted as 'finished' once it goes out of play at the bottom of the playfield.

Score / Bonus Achievement

Points can be achieved when a ball passes over the score sensors. Each sensor has a different points value & the score increases automatically.

Score Display

The maximum score the player can achieve is 99999999.

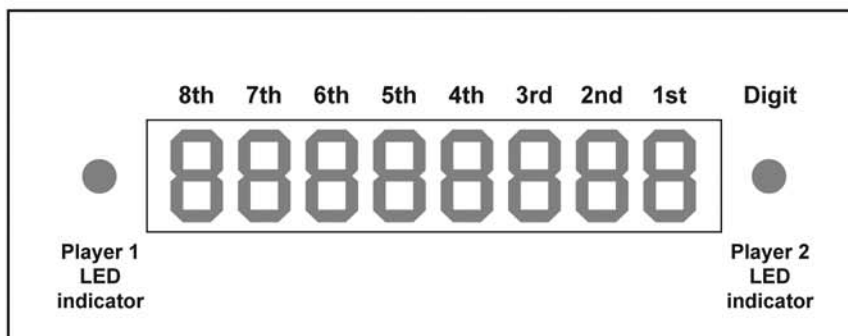

Player mode indicators

Indicator	Description
RED	It is player 1's turn to play
GREEN	It is player 2's turn to play

Display Messages

Message	Meaning
HI-SC	Highest score. When this message is displayed it will show the highest score so far. This will be set to zero when the power is turned off.
LIFE-XX	This indicates the number of balls left for play.
PL-1 / PL-2	This shows the scores once the game has finished. P1 - player one, P2 - player two.

Score Display

There are FOUR control buttons and ONE Power Switch.

Button	Description
START / RESET	Press to reset or start a new game. The score will set to zero each time the button is pressed. You can stop the game during play.
VOLUME CONTROL	Press to adjust volume level. The maximum volume level is 5 and mute is 0.
LEFT AC FLIPPER CONTROL	Press this button to trigger movement of left flipper.
RIGHT AC FLIPPER CONTROL	Press this button to trigger movement of right flipper.
PLAYER SELECT	Press to change the current player game mode: PL-1 - indicates one-player game PL-2 - indicates two-player game
LEVEL SELECT	Press to change the skill level: LE-0 - indicates skill level is set to zero LE-1 - indicates skill level is set to one LE-2 - indicates skill level is set to two

Specification

AC/DC Adaptor

Input: 100-240V AC

Output: 24V DC 3.75A

Pinball

Operation Voltage: 22VDC

Operation Current 3A max. (@ 20v DC)



"This symbol is known as the "Crossed-out Wheelee Bin Symbol". When this symbol is marked on a product, it means that the product should not be disposed of with your general household waste. Only discard electrical/electronic items in separate collection schemes which cater for the recovery and recycling of the materials contained within. Your co-operation is vital to ensure the success of these schemes and for the protection of the environment.

Mightymast Leisure Ltd

58 Bentwaters Park

Rendlesham

Woodbridge

Suffolk

IP12 2TW UK

Tel: +44-(0)1394-460896

www.mightymast.com

info@mightymast.com

